




**STEP 1:**  
Remove one lateral contact surface of the SenoFix® and place it under the decking board. The first board is then fastened from above with a screw made of hardened high-grade steel into a pre-drilled and pre-sunk hole





**STEP 2:**  
attach the SenoFix (do not jet drill the screws)



**STEP 3:**  
attach the next decking board

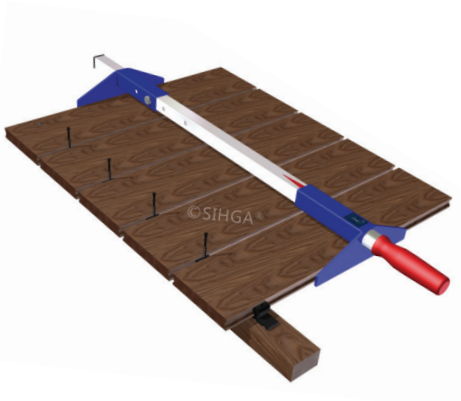

**STEP 4:**  
After the installation of ca 0,7 m decking widths use the clamp or fastening trap to fix the distance between the boards. Use spacers for a perfect, even distance between the boards.

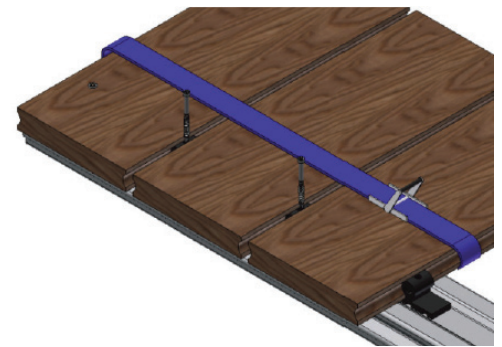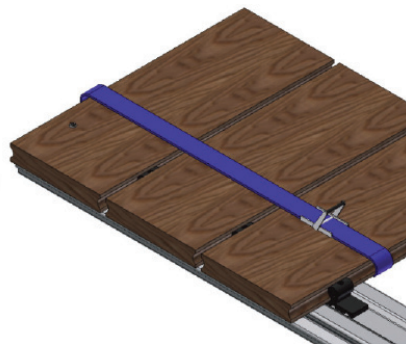

**STEP 5:**  
drill the screws, remove the clamp/ fastening trap and install the next 0,7m of decking following the steps 2-4.